

DOOR

NOTE: On two door model RAM trucks, the LF antenna is located in the left front door. On four door model RAM trucks, the LF antenna is located in the left rear door.

1. Move the LF antenna into position for installation.
2. Install the two screws that secure the LF antenna to the door.
3. Reconnect the door wire harness connector (1) to the Low Frequency (LF) antenna connector receptacle.
4. Install the front door trim panel (for two door model vehicles). (Refer to 23 - Body/Door - Front/PANEL, Door Trim/Installation). If vehicle is equipped with four doors (Refer to 23 - Body/Doors - Rear/PANEL, Rear Door Trim/Installation).
5. Connect the battery cable to the negative battery post.

