

## REMOVAL

The Remote Frequency Hub (RF Hub) Module Assembly consists of a harness connector and two pushpin.

The control module is located behind the rear cab panel beneath the rear sliding glass assembly. Note that the remote start antenna is plugged directly into the RF Hub.

1. Disconnect and isolate negative battery cable.
2. Flip the left rear seat cushion.
3. Remove the left rear seat rear inboard bolt with seat belt buckle. Refer to 10 - Restraints/BUCKLE-Seat-Belt/Remove
4. Remove left rear seat. (Refer to 23 - Body/Seats/SEAT/Removal)
5. Remove left rear child seat tether. Refer to 10 - Restraints/Anchor-Child-Seat/Remove
6. Remove rear left side rear cab trim panel push pins to remove panel. (Refer to 23 - Body/Interior/PANEL, Cab Back Trim/Removal)
7. Disconnect coax cable electrical connector at the RF hub (1).
8. Disconnect harness (2) and remove the RF Hub retainers. (3)

