



## REMOVAL

1. Disconnect and isolate the negative battery cable.
2. Remove the lower steering column opening cover. (Refer to 23 - Body/Instrument Panel/COVER, Steering Column Opening/Removal).
3. Reach behind the KIN (1) and disconnect the electrical wiring harness connector (2).

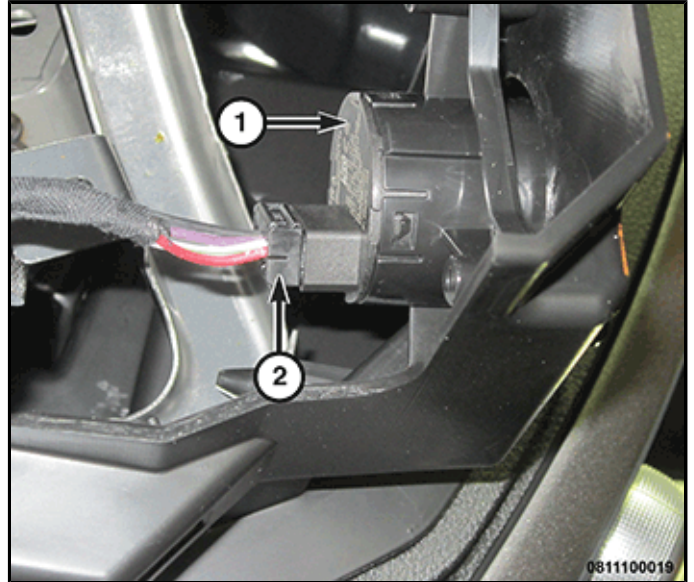

4. Remove four (1) retaining screws.

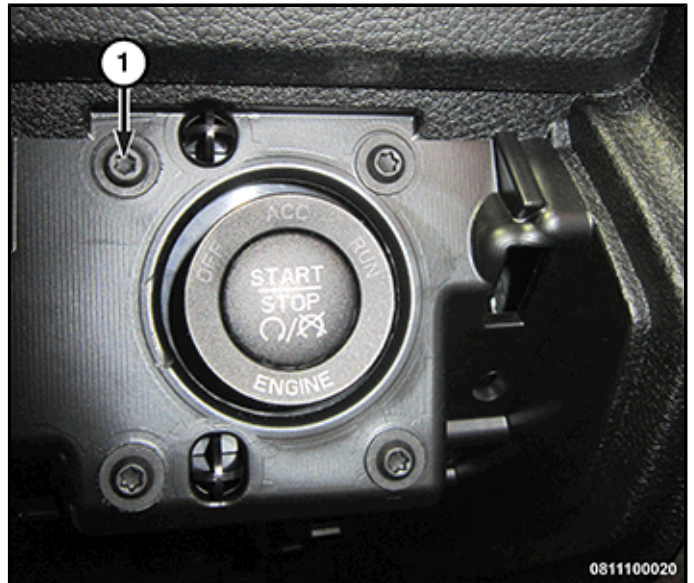

5. Remove the KIN from the vehicle.